

1
5X8M TENT

PARTS

NO.:1 Short Pipe
Quantity 10



NO.:2 Long Pipe
Quantity 22



NO.:3 Pipe as legs
Quantity 6



NO.:4 Pipe as legs
Quantity 4



2 Way joints
Quantity 10



110° 3 Way Corners B
Quantity 4



110° 4Way Corner D
Quantity 6




140° 3 Way Corner^s A
Quantity 2



140° 4 Way Corners C
Quantity 3



Side Panels
Quantity 4




UV Rate Cover
Quantity 1




FRAME ASSEMBLY

1. Place all corners , NO.:1 pipes and NO.:2 pipes on the ground as shown. Push two pipes into the 2 way joints.

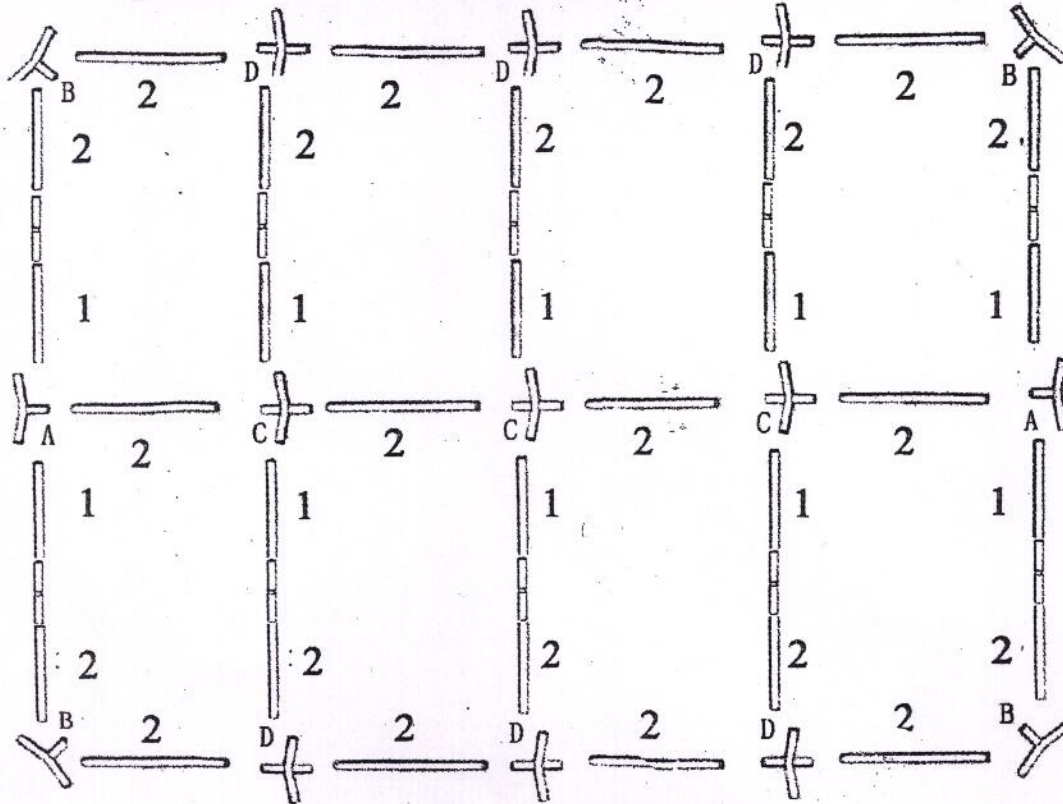

2. Connect pipes together starting with the center frame. Then assemble each side.

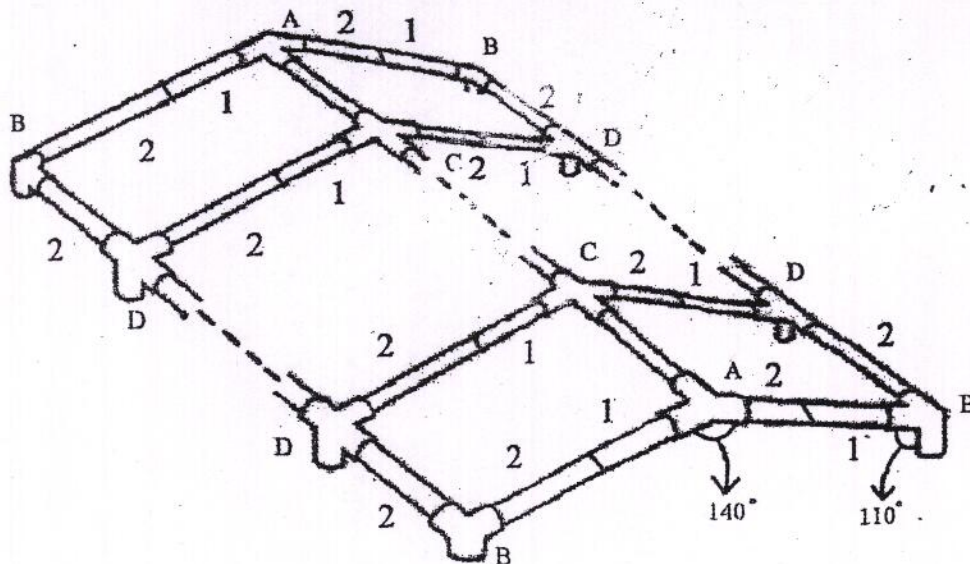

ATTACHING COVER TO FRAME


1. Start by lifting one of the frame and inserting legs.
2. Drape cover over frame.
3. Next, lift the other side of the frame and insert remaining legs.

NOTE: NO. 4 pipes should be set at corner to fix the tarp.


4. Hung up the 4 side panels.

NOTE: Loosen the straps on the bottom of the legs when attach the cover. Adjust as needed after the canopy is assembled.



1. Start by inserting the legs on one side of the frame.

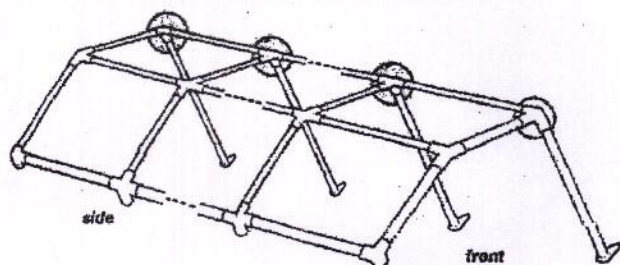

2. Drape canopy over frame.

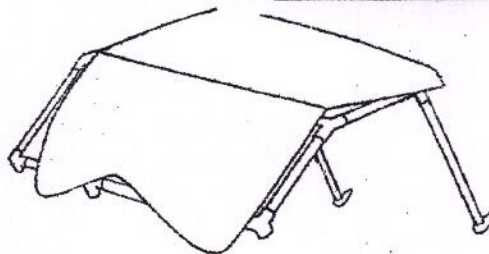

Insert the remaining legs and finish attaching cover to frame.
Then hung up the 4 side panels.

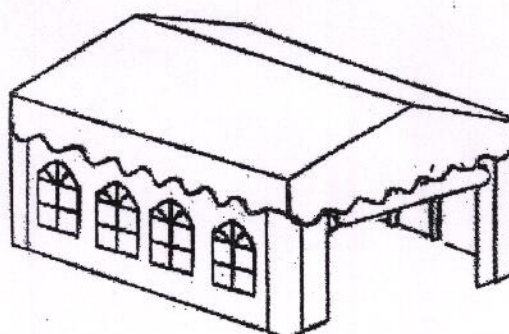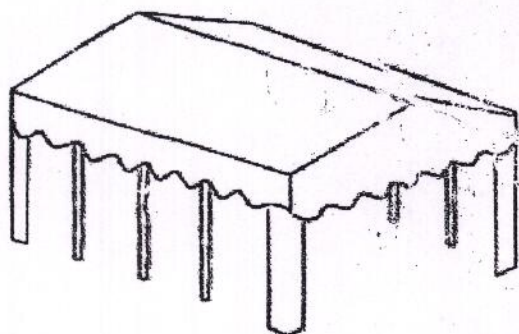

NOTE: USING TIR DOWNS OR PROPER ANCHOR KIT FOR YOUR NEEDS.